

WARNING


DO NOT ALTER SCAFFOLD

FRAMING GUIDE FOR STAIR VOID PLATFORMS

Buildsafe's Void Platforms are designed so as to provide protection from fall into a void as early as possible during construction. This will sometimes mean that Buildsafe have installed their platform even before the first floor walls have been erected. This should not hinder the installation of the walls.

IF YOU UNSECURE OR MAKE ADJUSTMENTS TO A VOID PLATFORM, YOU ARE NOW COMMITTED TO ENSURING IT REMAINS COMPLIANT AND IN A SAFE WORKING ORDER.

THE SAFETY OF OTHERS IS NOW YOUR RESPONSIBILITY!

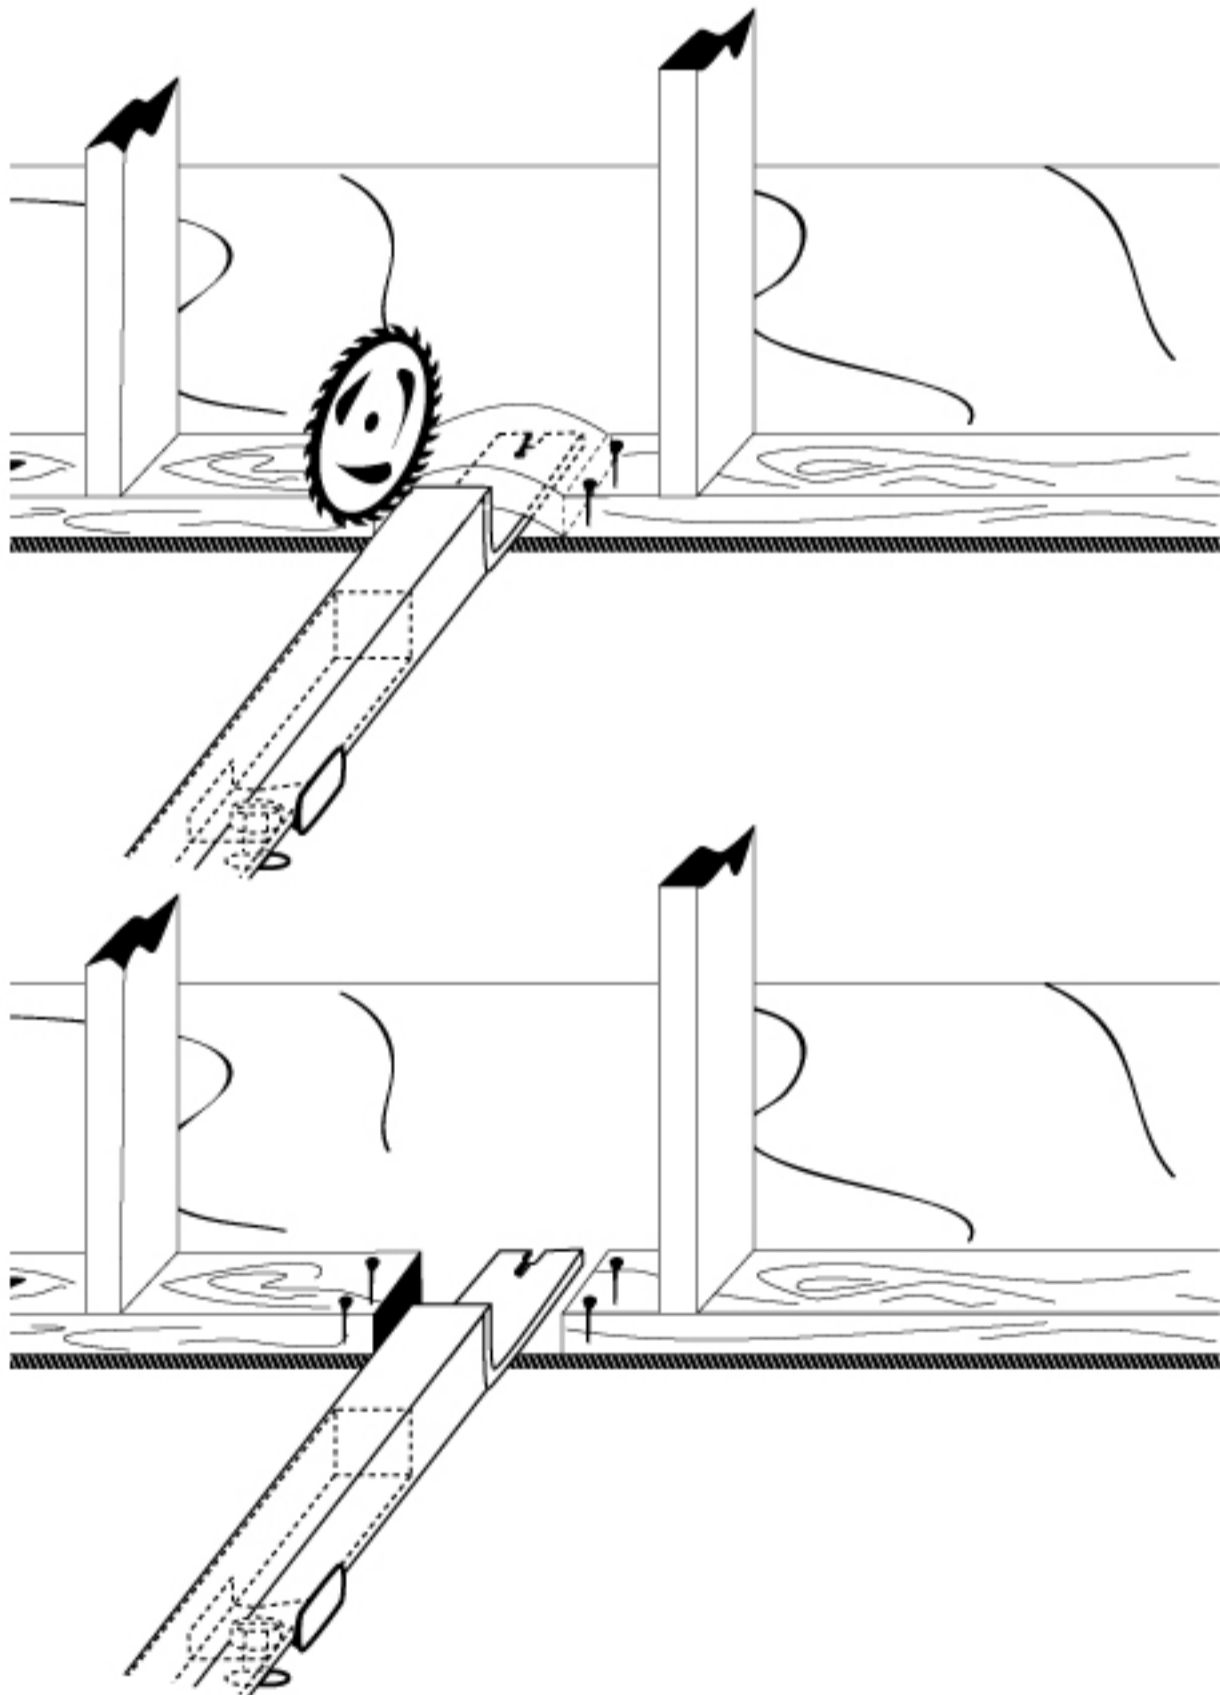

SUGGESTED WALL ERECTION PROCEDURE:

1. LOCATE BOTTOM PLATE TO CORRECT POSITION AND FIX TO FLOOR OVER BRACKET.
2. ENSURE SUFFICIENT NAILING TO EITHER SIDE OF INTRUDING BRACKET.
3. CUT OUT BOTTOM PLATE EITHER SIDE OF BRACKET BETWEEN NAILING.

AVOID REMOVING ANY SCREWS OR BOLTS TO VOID PLATFORM BRACKETS

IF IT DOESN'T LOOK RIGHT, IT PROBABLY ISN'T RIGHT.

Call your site supervisor or Buildsafe immediately if you feel platforms are not safe.



Safety doesn't happen by accident
DELIVERING SAFETY SOLUTIONS
to the building industry

Void Protection & Pool Safety Systems
Mobile & Quickstage Aluminium Scaffolds
Perimeter, Rafter & Temp Balcony Fallguard
Lower Roof Walkways & Hang-On Platforms
RCD Tagging, Lead & Tool Tagging
Safety Signs, First Aid Kits & Safety Gear

1300 558 027
www.buildsafe.net.au